PROBLEM SYMPTOMS TABLE

SEAT BELT WARNING SYSTEM

Symptom	Suspected Area	See page
Driver seat belt warning light does not operate	1. Front seat inner belt LH	SB-13
	2. Center airbag sensor assembly	SB-13
	3. Combination meter assembly	SB-13
	4. Wire harness	SB-13
Front passenger seat belt warning light does not operate	1. Front seat inner belt RH	SB-15
	2. Occupant detection ECU	SB-15
	3. Road sensor	SB-15
	4. Center airbag sensor assembly	SB-15
	5. Combination meter assembly	SB-15
	6. Clock assembly	SB-15
	7. Wire harness	SB-15

TERMINALS OF ECU

1. COMBINATION METER ASSEMBLY

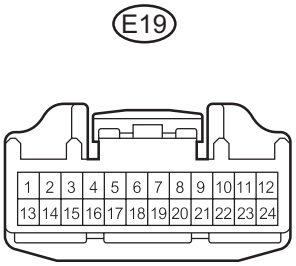

B148546E02

Standard resistance

Terminal No. (Symbols)	Terminal Description	Condition	Specified Condition
E19-9 (P/SB) - Body ground	Passenger seat belt signal	The passenger seat is occupied, seat belt is fastened → unfastened	Below 1 Ω → 10 kΩ or higher

2. MULTI-MEDIA MODULE DISPLAY (WITH NAVIGATION SYSTEM)

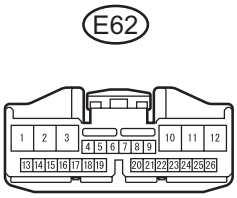

B126321E02

Standard resistance

Terminal No. (Symbols)	Terminal Description	Condition	Specified Condition
E62-21 (PBEW) - Body ground	Passenger seat belt signal	The passenger seat is occupied, seat belt is fastened → unfastened	Below 1 Ω → 10 kΩ or higher

3. A/C CONTROL ASSEMBLY (WITHOUT NAVIGATION SYSTEM)

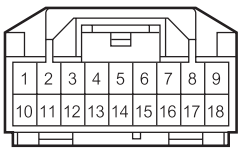

H

B148266E01

Standard resistance

Terminal No. (Symbols)	Terminal Description	Condition	Specified Condition
E3-13 (PBEW) - Body ground	Passenger seat belt signal	The passenger seat is occupied, seat belt is fastened → unfastened	Below 1 Ω → 10 kΩ or higher

SB